

HEPA / ULPA FILTER

BENCH TOP REPLACEABLE FILTER (BTR) INSTALLATION INSTRUCTIONS

EXTREME CAUTION SHOULD BE TAKEN TO AVOID CONTACT WITH MEDIA

STEP 1: UNPACK FILTER



A) PLACE FILTER BOX ON FLOOR, CAREFUL TO SET BOX IN CORRECT ORIENTATION, AS PER THE ARROW.



B) REMOVE FILTER FROM BOX BEING CAREFUL NOT TO TOUCH FILTER MEDIA.



C) PLACE THE FILTER GENTLY ON THE FLOOR, REMOVE THE TAPE, AND TAKE THE FILTER OUT OF THE BAG.



D) PLACE FILTER ON A FLAT, CLEAN, PROTECTING SURFACE WITH THE EXPANDED FACE SCREEN ON THE BOTTOM.

WARNING!


TOUCHING FILTER MEDIA WILL RESULT IN DAMAGE TO THE MEDIA THAT WILL AFFECT THE PERFORMANCE OF THE FILTER

Damage to filters occurring during or after installation and leak qualification testing failures. The filters supplied by Price have been 100% tested and certified by the manufacturer to be free of defects and leaks. Price cannot accept responsibility for damage that occurs after shipment, whether through transit, handling or installation, and will not replace filters under our standard warranty.

HEPA / ULPA FILTER

BENCH TOP REPLACEABLE FILTER (BTR) INSTALLATION INSTRUCTIONS

STEP 2: INSTALLING THE FILTER

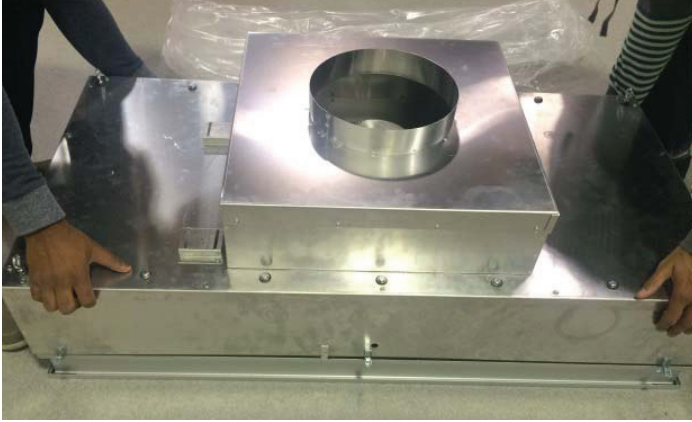

A) PLACE FFU-HE TOP CAP ASSEMBLY ONTO FILTER'S GASKETED FLANGE/FRAME, BEING CAREFUL TO NOT DAMAGE THE FILTER MEDIA.



B) ATTACH FILTER TO TOP CAP ASSEMBLY BY HOOKING AND SECURING LATCHES. GASKET MAY NEED TO BE COMPRESSED TO GRAB CHANNEL WITH LATCH.

**FOR ASSISTANCE, PLEASE CONTACT THE PRICE APPLICATIONS ENGINEERING TEAM
BY PHONE AT (204) 654-5613 OPTION 5 OR BY EMAIL AT CRITICALENVIRONMENTS@PRICEINDUSTRIES.COM**

To reorder new filters please contact your local Price Sales Representative at
www.priceindustries.com/criticalenvironments/contact